

ASSEMBLING & INSTALLATION INSTRUCTIONS

The drawing shown may not exactly match the product enclosed. However, the installation instructions do apply to this product.


1358 13664 1529

- **♦** WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
- ♦ ATTENTION! COUPER LE COURANT AU FUSIBLE OU UN DISJONCTEUR.

MOUNTING THE FIXTURE (Fig.1)

- 1. Shut off the power at the circuit breaker box. Remove old fixture and all hardware from Junction Box.
- 2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
- 3. Thread the pipe screw part way into the center hole of the single bar and secure with hex nut.
- 4. Attach the single bar to the junction box using two box screws as shown. The side of the single bar marked "GND" must face out. The junction box is not included.
- 5. While holding the lamp body(A) towards the ceiling, connect the electrical wires as Shown in Fig.2, making sure that all wire nuts are secured. You may have to wrap the connections with electrical tape. If your outlet has a ground wire (green or bare copper), connect the fixture ground wire to it. Otherwise connect fixture's ground wire directly to the Mounting strap with the green screw provided. After wires are connected, tuck them carefully inside the Junction Box.
- 6. Raise lamp body (A) onto the junction box, aligning pipe screw on single bar with center hole in lamp body and lock it securely with the ball nut(D).
- 7. Attach the glass shade(B) to bottom of the lamp holder, then lock it securely with check ring(C) until sung.
- **8.** Install the light bulbs(not included) in accordance with the fixture's specifications. **NOTE: DO NOT EXCEED THE SPECIFIED WATTAGE!**

Your installation is now complete. Return power to the junction box and test the fixture.

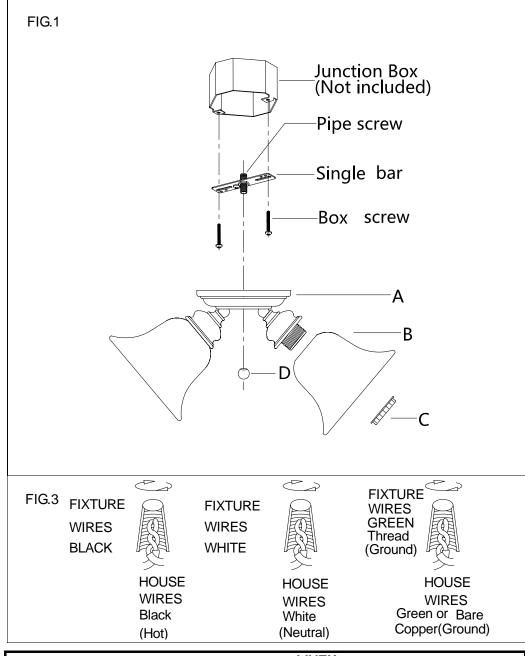

Thank you for purchasing a **LIVEX** product.

Need assistance with parts or assembly? Please call customer service at: 800-761-8056

Or visit us online at: WWW.LIVEXLIGHTING.COM